


1. Upper wires
2. Base bottom wire (continuous)
3. "W" wire (continuous)

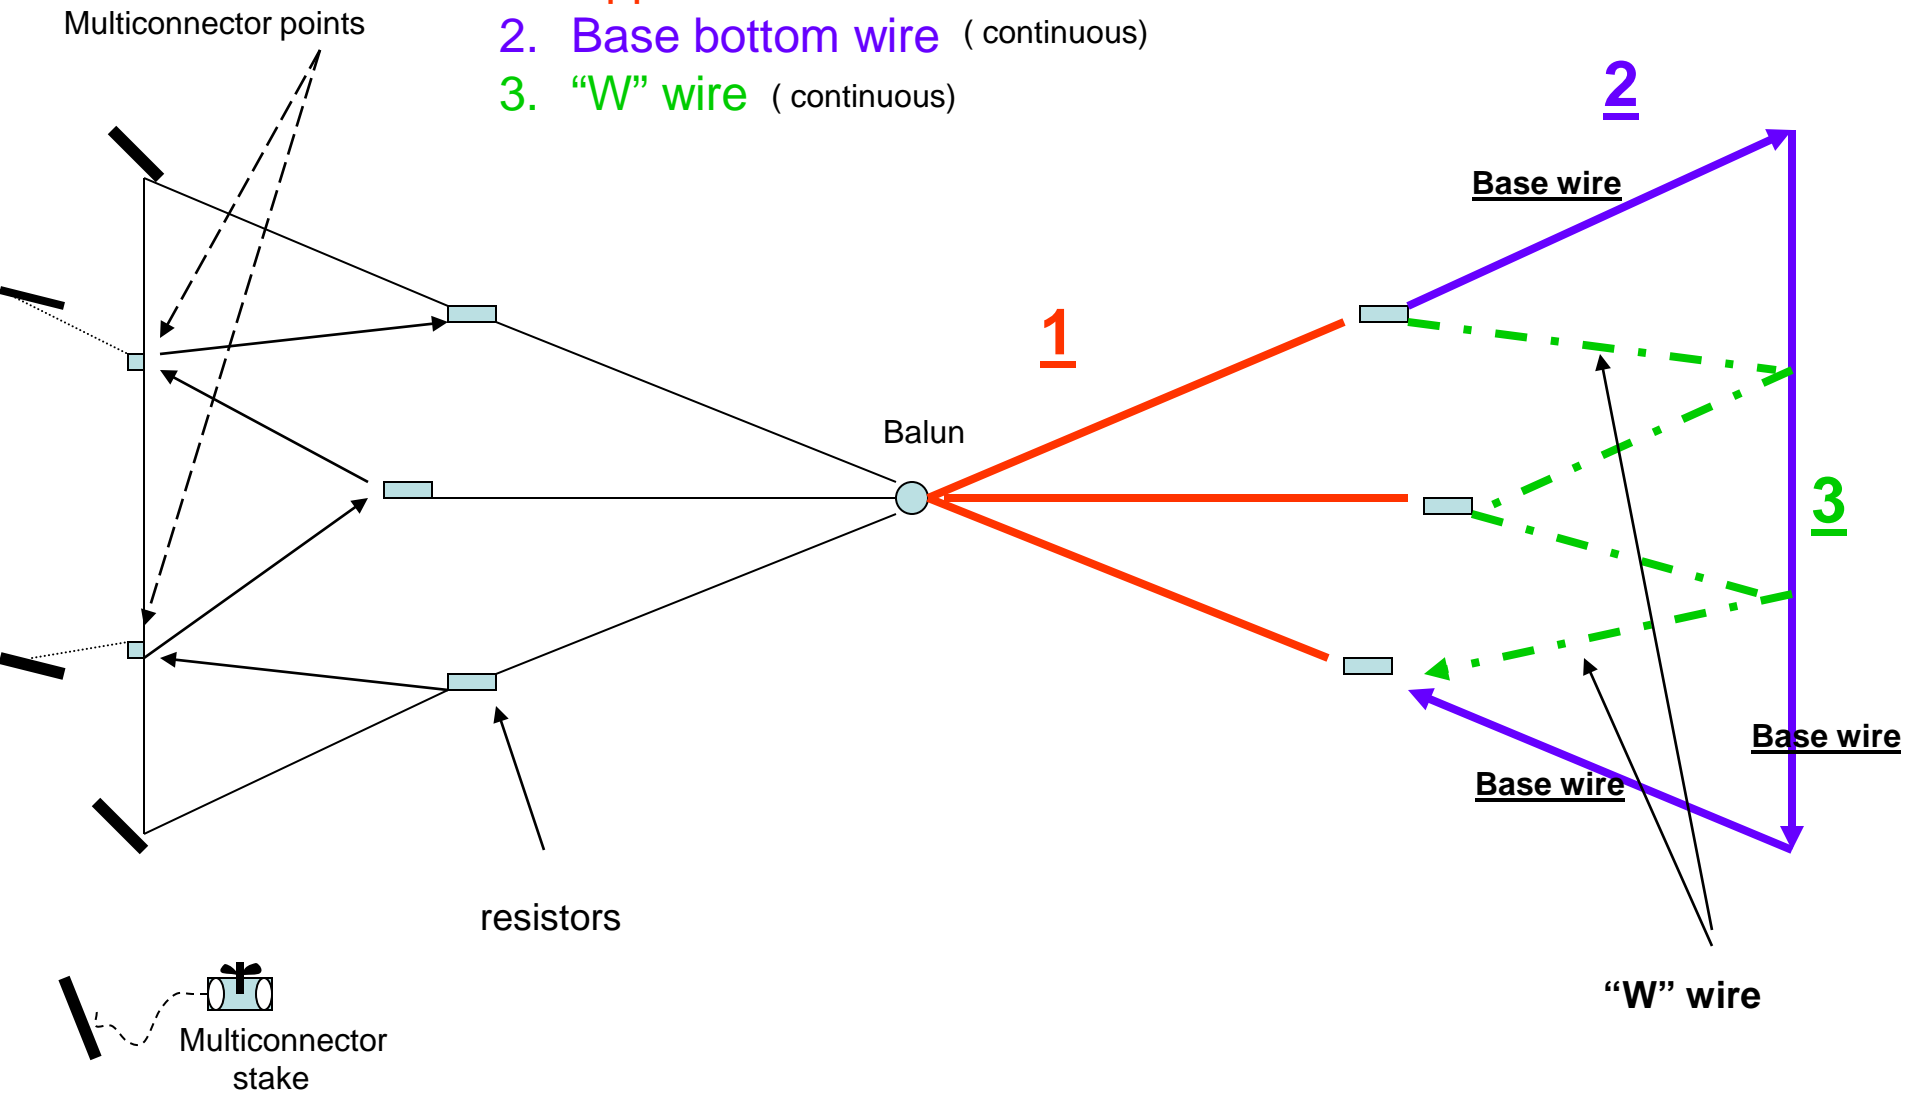

**Bird's eye view of antenna components and sequencing of setup  
WHISKEY Antenna**